 Allt montage skall utföras enligt AMA.
Assembly must be done according to instructions.

AB Markaryds Metallarmatur 4 8255 01_rev.5
Tel. +46 (0)433 737 00 170206 sid 1(2)
www.mma.se




1 Montering

ENTL levereras med väggkåpan monterad (monterad med "snäpp")
För att demontera kåpan gör enl följande:



Ta tag i kåpan med fingrarna från båda händerna och sätt tummarna på ratten.
Snäpp av kåpan.

Bottenplattan består av monteringsplatta och en löst monterad platta som håller givaren.

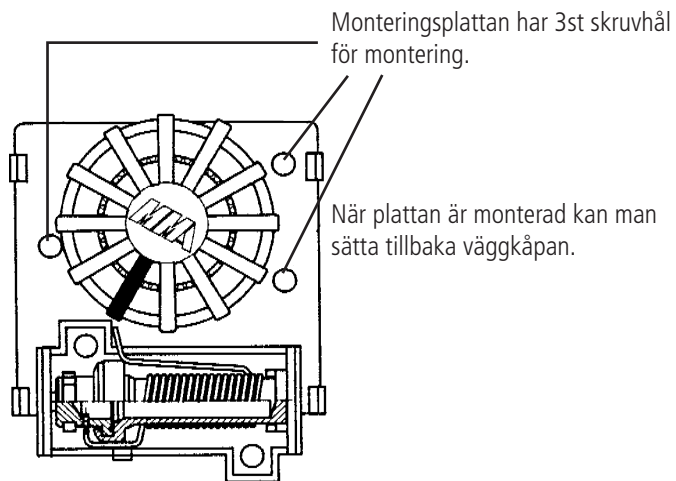

2 Montering

Givarplattan har 2st skruvhål för separat montering

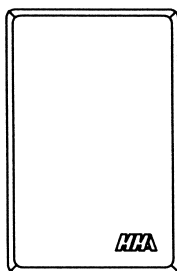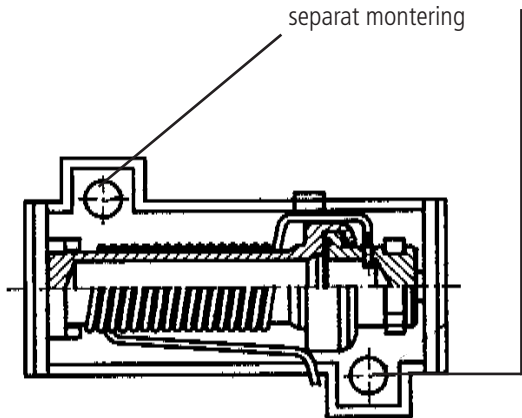

Om givaren skall placera på ett annat ställe än termostaten, knäpp loss givaren med tillhörande platta från monteringsplattan.
Rulla ut kapilläröret så långt som det behövs och montera givaren på önskad plats.
Sätt medföljande kåpa över givaren.

Klammer samt spik medföljer om detta behövs vid montering.

3


Frostskydd

*	1	3	5	6	7	8
11	15	18	20	22	24	26

ca. °C max vid stängd ventil

Om ENTL ska monteras på en kylventil, använder man medföljande etikett "Kallare - Varmare".
Montera denna så att den svarta pilen kommer strax under siffran 5.



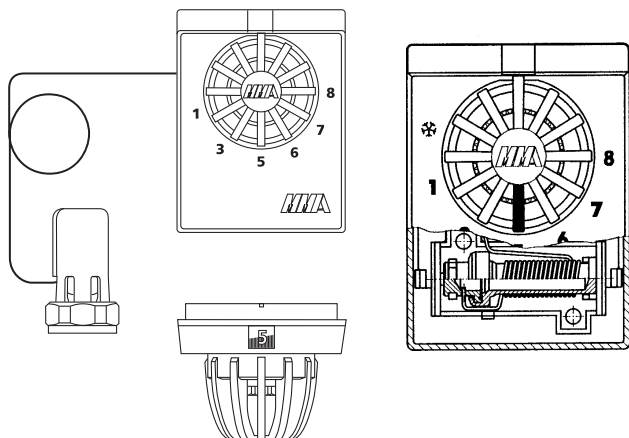

AB Markaryds Metallarmatur 4 8255 01_rev.5
 Tel. +46 (0)433 737 00 170206 sid 1(2)
 www.mma.se




1 Assembling

ENTL is delivered with it's cover mounted (snap on type).
 To remove the cover do as follow:



Grip the cover with both hands holding your thumbs on top of the knob and snap it off.

The bottom plate consist of the mounting plate and a plate mounted loosely holding the sensor.

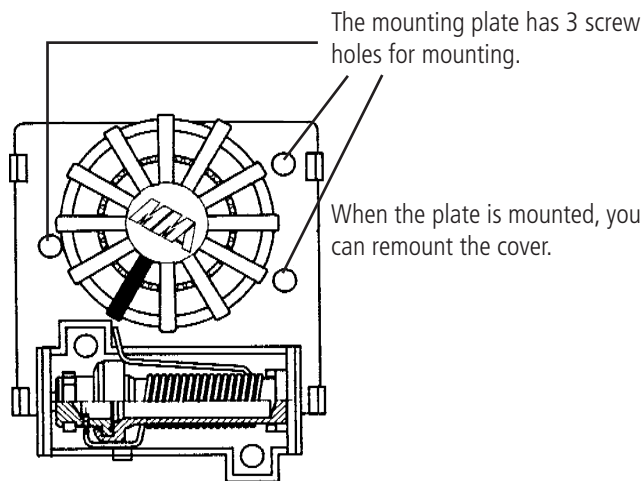

2 Assembling

The sensor plate has 2 screw holes for separate mounting

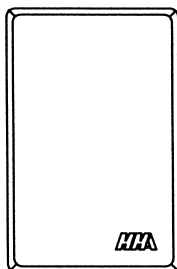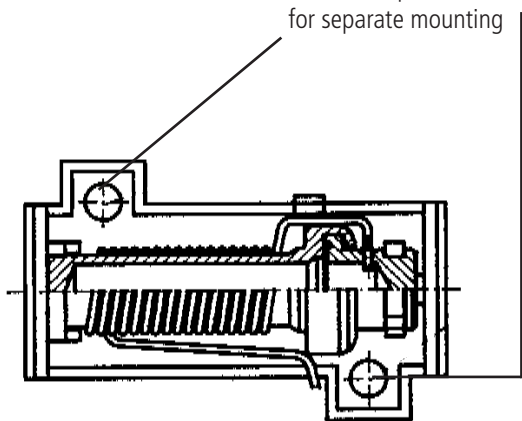

If you want to put the sensor somewhere away from the thermostat, you just loosen the sensor plate with the sensor from the bottom plate. Roll out desired length of capillary tube and mount the sensor where you want it. Put the cover over the sensor.

3

Frost protection							
*	1	3	5	6	7	8	
11	15	18	20	22	24	26	ca. °C max at closed valve

The label "Cooler - Warmer" is used when the thermostat ENTL is mounted on Cooling valves. Put the label with the arrow under number 5.



Staples and nails are supplied if required during assembling.