


Scout Bi-Ocular Quick Start Guide

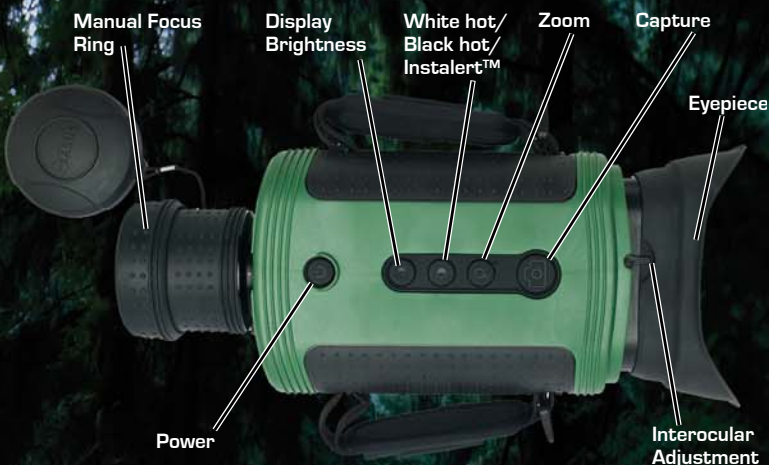

Power Button – The Scout Bi-Ocular camera has 3 power modes: On, Off, and Standby.

- On - Takes approximately 90 seconds (during bootup there is a fast-flashing red LED on the eyepiece display).
- Standby - After the camera is on, pressing the Power button will toggle the camera between On and Standby mode. (In Standby there is a slow-flashing red LED on the eyepiece display.)
- Off - Push and hold the power button for 8 sec. to turn off.

Capture Button – Takes snapshots (press and release) or video clips (press and hold 3 seconds to start video recording). The files are stored on the integrated SD card.

Display Brightness – Toggles through five brightness settings.

White/Black Hot/Instalert™ – Toggles through the video modes: White Hot, hotter items appear as white or light grey; Black Hot, hotter items appear as black or dark grey; Instalert™ (I1 - I4), the hottest objects in the scene are highlighted in red.

Zoom – When enabled, causes the image to zoom to 2X.

Interocular Adjustment – The interocular adjustment lever allows you to adjust the distance between the two eyepiece displays for the most comfortable viewing.



This document is controlled to FLIR Technology Level EAR 1. The information contained in this document is proprietary and/or restricted and pertains to a dual use product controlled for export by the Export Administration Regulations (EAR). This document and data disclosed herein or herewith is not to be reproduced, used, or disclosed in whole or in part to anyone without the written permission of FLIR Systems, Inc. Diversion contrary to US law is prohibited. US Department of Commerce authorization is not required prior to export or transfer to foreign persons, parties, or uses otherwise prohibited.

Installing the Batteries and SD Card

The batteries must be installed and charged before using your camera.

1. Remove the SD card door.
No tools are required.
2. Install the SD card into card slot with label facing the front of the camera.




Grasp spring loaded buttons on SD card door edges and pull



3. Pull off the battery cover by lifting the latch as shown at the right.
4. Install the batteries as shown.

Battery cover latch

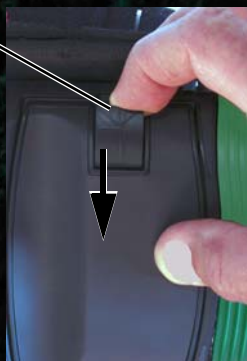

5. Snap the SD card door back into place and re-install the battery cover—it only fits one way.

Charging the Camera

The batteries in the camera must be charged prior to first use.

1. Connect the Hot Shoe to your camera.
2. Ensure that the plug is fully seated in the Hot Shoe.

When charging correctly, the charging indicator will be lit yellow and will blink green for one second within about 35 seconds.

The charging indicator will continue to blink at decreasing intervals until the batteries are fully charged.

When fully charged, the charging indicator will be lit solid green. The initial charge time is approximately 4 hours.

Plug from power adapter

Charging indicator



Solid green

