



Changing the Magazine for Glazing Points

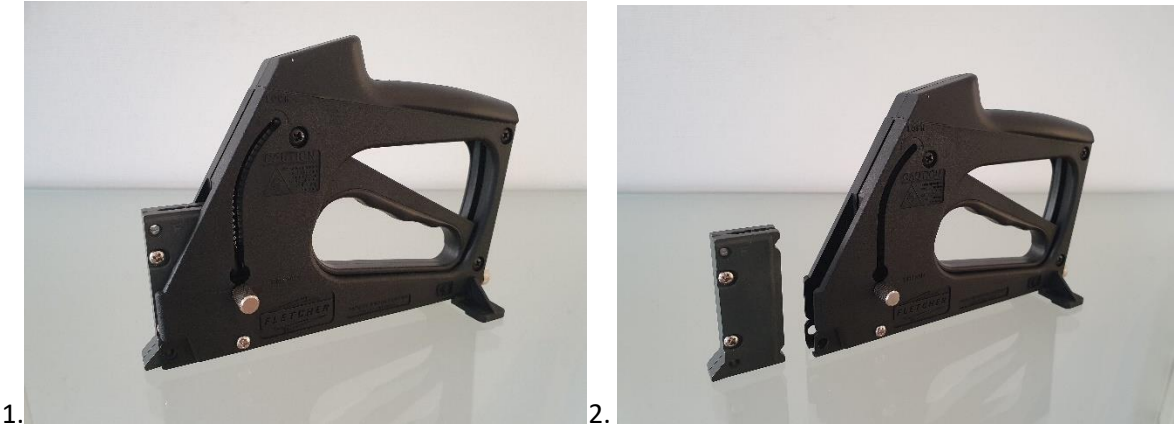

The magazine must be removed, inverted and reinstalled to convert to glazing points

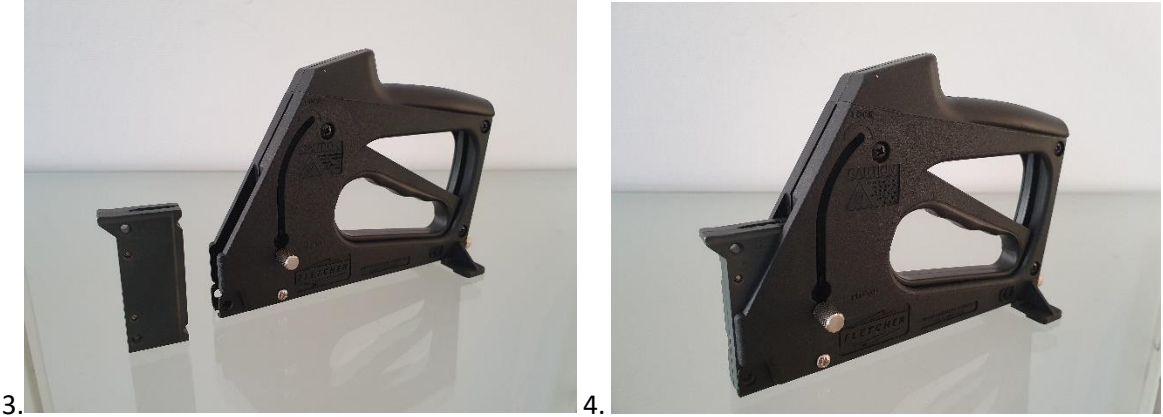

GSAB