


Donning Poster Dräger PARAT® Soft Pack



D-83029-2013

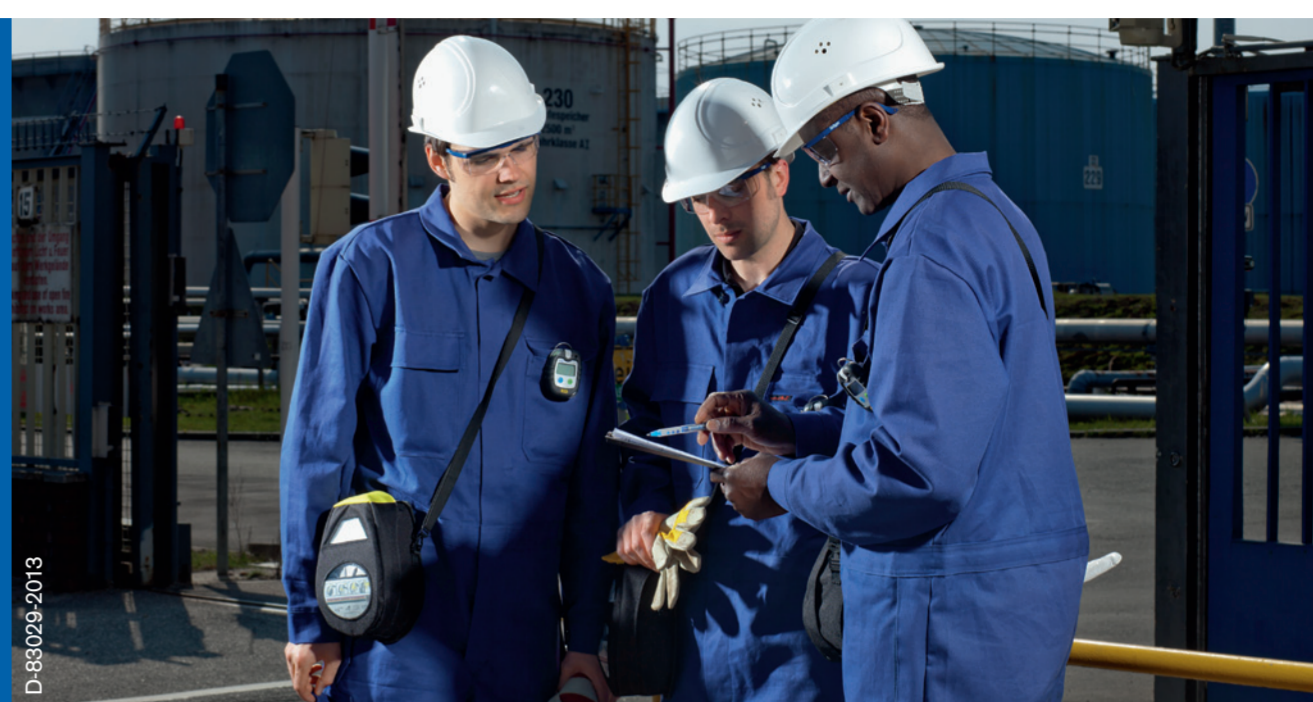

D-92771-2013

Dräger PARAT® Soft Pack



D-92666-2013 & D-84465-2013

Break the security seal.



D-92678-2013

Pull the yellow flap downwards.



D-92687-2013

Open the Soft Pack **completely**. The front filter sealing plug should be automatically removed.



D-84465-2013

Remove the hood from the Soft Pack. Pull the hood against the Velcro holder, it will automatically open. The second filter sealing plug will automatically be detached when the hood is removed.



D-84506-2013

Widen the neck seal and pull the hood over your head. The inner head harness automatically adjusts to your head. Ensure that nose and chin sit comfortably in the half mask and that all hair is tucked into the hood.



D-92706-2013

Check the fit of the half mask by closing the front filtering opening with the palm of your hand. If negative pressure is not generated readjust the half mask to ensure a close fit over nose and mouth.



D-84531-2013

Ready for use.

Always read and understand the instructions for use of the Dräger PARAT® escape device prior to use!